# OWNER/OPERATOR'S MANUAL & ILLUSTRATED PARTS LIST

## **MODEL:**

73-70585 ROTARY SWEEPER-54" RS350



WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.



## CALIFORNIA **Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

#### Californie Proposition 65 **Avertissement**

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.



# **A** AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

#### California Advertencia de la Proposicion 65

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.



# ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

## **CALIFORNIA Proposition 65 Warning**

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.



#### **IMPORTANT MESSAGE**

Thank you for purchasing this Jacobsen product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with an Owner/Operator's Manual. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Treat this product properly and adjust it as instructed, and it will give you many years of reliable service.

See a Jacobsen dealer for any service or parts needed. Jacobsen service ensures that you continue to receive the best results possible from Jacobsen products. You can trust Jacobsen replacement parts because they are manufactured with the same high precision and quality as the original parts.

Jacobsen designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Jacobsen, a Textron Company One Bob Cat Lane Johnson Creek, WI 53038-0469

TABLE OF CONTENTS INTRODUCTION / SPECIFICATIONS	FIGURES	PAGE
SAFETY		
ASSEMBLY INSTRUCTIONS		,
INSTALLATION INSTRUCTIONS		6
OPERATION		
SERVICE		
BROOM PARTS	FIGURE 1	10, 11
HITCH PARTS	FIGURE 2	12, 13
GEARBOX (SN 1001 - 1430)		
GEARBOX (SN 1431 - 1712)	FIGURE 4	16, 17
GEARBOX (SN 1713 - 1940)	FIGURE 5	18, 19
GEARBOX (SN 1941 - )	FIGURE 6	20, 21
CASTER WHEELS	FIGURE 7	22, 23
CASTER WHEELS (SN 2619 - )	FIGURE 8	24, 25

9-2004

## **INTRODUCTION / SPECIFICATIONS**



#### **DESCRIPTION**

Clear away leaves and debris on pathways, parking lots, sidewalks, and driveways with this 54 inch wide rotary sweeper. Hardwearing nylon broom, driven by a bevel gearbox from the tractor PTO, has hydraulically controlled angling for left and right hand operation. Flotation springs (on older models) or caster wheels (on newer models) reduce ground pressure on the broom for longer life.

#### **SPECIFICATIONS**

#### NOTICE!!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Jacobsen, a Textron Company strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Jacobsen Engineering Department. Any Jacobsen product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of "after-market" accessories or component parts not specifically approved by Jacobsen—will result in the Jacobsen Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Jacobsen will be considered the responsibility of the individual(s) or company designing and/or making such changes. Jacobsen will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:

# ATTENTION! BECOME ALERT!

Your safety and the safety of others is involved.

#### Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Jacobsen machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

## **A** DANGER

**DANGER** indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

## **AWARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

## **A**CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

### CAUTION

**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

## **TEXTRON**

**GOLF, TURF & SPECIALTY PRODUCTS** 

MODEL NUMBER |
SERIAL NUMBER

JOHNSON CREEK, WI MADE IN U.S.A

**MODEL NUMBER:** This number appears on sales literature, technical manuals and price lists.

**SERIAL NUMBER:** This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.



#### **GENERAL SAFETY**

- 1. Read and understand the Owner's Manual before attempting to operate this machine.
- 2. Operate all controls from the operator's seat. NO RIDERS.
- 3. Keep all shields in place and safety switches adjusted properly.
- 4. Do not leave equipment unattended. STOP the engine and remove the key.
- 5. Do not allow minors or the inexperienced to operate this machine.
- 6. Keep people and pets a safe distance away from machine using power driven attachments. Injury could result from flying debris.

#### **OPERATING SAFETY**

- Stop engine to make repairs or adjustments.
   Do not attempt to work on unit or attachments with engine running.
- 2. Before leaving operator's seat:
  - Disengage PTO drive.
  - Set PARK brake.
  - · Stop engine.





#### **MODEL RS350 ROTARY SWEEPER**

- Remove broom from the shipping crate. Remove shipping bracket.
- Remove the bottom belt shield from the hitch frame. Remove hose clamp from top of hitch frame.
- Loosen 3/8 locking nuts on square head set screws. Turn setscrews in. These setscrews are used
  to level the broom and must be adjusted after the sweeper is mounted on the power unit. Install
  hitch frame to sweeper by inserting stud into the swivel ball in the center front of the hitch frame.
  Attach the rear swivel ball to the hitch frame using the 3/8 X 1 flange bolts & nuts previously
  removed from the shipping bracket.
- Install belt and idler spring as shown in Photo 3.
- Reinstall bottom belt shield.
- Remove drive pulley shield and install the proper drive belt for the power unit. (See Photo 3) Replace shield.

Model 220/230 = 81-A042 Belt

Model 220/230 with electric clutch = 81-A040 Belt


Model 410 = 81—A040 Belt

Model 420/430 = 81-A040 Belt

Model 425 = 81—B041 Belt

Model 425/525 with electric clutch = 81-B040 Belt

- Attach sweeper to power unit. See page 6 for Installation Instructions, pages 3 and 4 for Safety Instructions and page 7 for Operation Instructions.
- Extend the cylinder completely. Fasten hoses to hitch frame with clamp as shown in Photo 4. Be
  certain that hoses are not stretched tight with the cylinder fully extended. Keep hoses away from
  drive pulley.

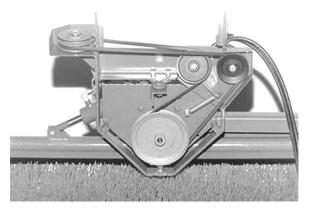

**Photo 3 - Drive Belt Installation** 



Photo 4 - Hose Clamp and Routing



#### MOUNTING INSTRUCTIONS

On Models Serial No. 1001 - 2246:

- This sweeper is designed to fit MODEL 220, 230, 410. 420, 430, 425 and 525 Steiner power units. The MODEL 410 unit requires optional gauge wheels.
- On 420 and 430 models, mount the float spring bracket to the tractor grille (See Photo 1).
- On 425 models mount the float spring bracket to the tractor grille (See Photo 2). It is necessary to provide additional support with the grille reinforcement brackets inside the grille of the 425 models equipped with electric clutch. Fasten brackets to the grille panel with (6) 5/16 flange bolts and nuts.

**NOTE:** On Model 425 power units without electric clutch prior to Serial No. 1642 the reinforcement brackets will not fit and are not required.

• To mount on the 220, 230 and 525 power units, no float spring kit is necessary. The traction booster must be adjusted to provide the float.

#### On all models:

- Install drive belt over left hitch arm and move tractor into position until the quick hitch can be latched.
- Stop engine and install drive belt.
- Connect cylinder hoses to the auxiliary outlets.
- Adjust pivot stops to limit "tilt" of broom. EXTREME CARE MUST BE TAKEN TO LEVEL THE BROOM AFTER IT IS ATTACHED TO THE POWER UNIT! FAILURE TO LEVEL THE BROOM WILL RESULT IN UNEVEN BROOM WEAR. (See page 8 Adjustments.)
- Choose power angle for right, left, or straight ahead position.

#### On Models Serial No. 2247 & Up:

• With the sweeper mounted on the tractor, set the height adjustment by moving the 1/4" spacers on the caster wheel frame.

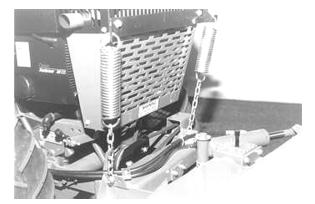


Photo 1 - 420 Float Spring Mounting



Photo 2 - 425 Float Spring Mounting



## **A**CAUTION

Observe all Safety Decals.

Keep all Shields in Place.

Before leaving tractor, move Forward - Reverse control to neutral position, disengage PTO, set parking brake and stop engine.

#### **OPERATING INSTRUCTIONS**

- 1. Mount rotary sweeper according to instructions on page 6.
- 2. Raise sweeper to clear ground surface.
- 3. Adjust sweeper angle to the right, left or straight ahead position using the auxiliary hydraulic control lever.
- 4. Engage PTO and set engine speed.
- 5. Lower sweeper by placing lift in FLOAT position. Check "FLOAT" pattern as described on page 6.
- 6. Move forward slowly.
- 7. Do not allow broom to bounce. This causes excessive broom wear. Adjustment of the float can avoid bounce.
- 8. Check the leveling of the broom each time the broom is used. The broom should contact the surface equally the entire length of the broom. (See page 8 for leveling adjustment.)

## **A**CAUTION

BE ALERT FOR OBJECTS IN THE PATH OF THE SWEEPER. POWER DRIVEN BROOM MAY THROW OBJECTS CAUSING DAMAGE TO PROPERTY OR INJURY TO BYSTANDERS.



#### **MAINTENANCE**

#### DAILY (10 HOUR) MAINTENANCE:

- 1. Check for signs of loose bolts etc.
  - Replace or tighten.
- 2. Check oil level in gearbox.
  - Use #90 oil 1/2 full
- 3. Remove cap plug and check chain. Chain should not run dry.
  - Lube with roller chain lube or #30 oil.

#### **ANNUAL (100 HOUR) MAINTENANCE:**

- 1. In addition to daily maintenance:
  - Grease all bearings.
- 2. Remove chain shield and inspect.
  - · Lube and adjust chain.
- 3. Storage
  - Clean entire machine and support on blocks to keep broom off the floor. Weight on the broom bristles will distort the shape of the broom

#### **ADJUSTMENTS**

#### Leveling adjustment:

Leveling the broom is acomplished by tilting the mounting plate in relation to the hitch frame. There are two square head set screws with locking nuts which need to be adjusted to level the broom. Loosen the locking nuts and adjust the set screws so that the broom touches the surface equally the entire length of the broom. Depending on the power unit, this adjustment may vary from side to side, so adjust it for the position which is most used. Example: If you use the broom angled to the right most of the time, adjust the leveling with the broom angled in that position. NOTE: For best results and longer broom life...level the broom in the straight ahead position and then alternate broom use in both angle positions.

#### Drive chain adjustment:

The broom bearing is mounted in slotted holes in the main frame and can be adjusted forward to tighten the chain. Remove the chain shield. Loosen the bearing mounting bolts and tighten the adjuster nut until the chain is tight. Retighten bearing bolts and replace the chain shield.

# Serial No. 1001 - 2246: Float adjustment:

Adjust float setting in the following steps:

- A. Take unit to an area of loose stones or dirt.
- B. Engage PTO to rotate broom and drop to "FLOAT" position.
- C. Raise the broom and note the test pattern on the ground. The test pattern should be 1-1/2" to 2" wide. A wider pattern will result in excessive broom wear and power consumption.
- D. Adjust spring tension by choosing the proper chain link on Models 420, 430 and 425. Adjust traction booster on Model 220, 230 and 525 to provide the proper flotation.

#### Serial No. 2247 & Up:

The gauge wheels allow the sweeper to follow the contour of the surface. The height is adjustable in 1/4" increments by moving the spacers on the caster wheel frame. The correct height adjustment is when the broom just touches the surface and provides a "clean sweep". Excessive broom wear and power requirements may result from settings which are too low.

#### **BROOM DRIVE BELT REPLACEMENT**

- 1. Remove the drive pulley shield and the bottom belt shield from the hitch frame.
- 2. Install the new belt and idler spring as shown in Photo 3.
- 3. Reinstall the bottom belt shield and the drive pulley shield.



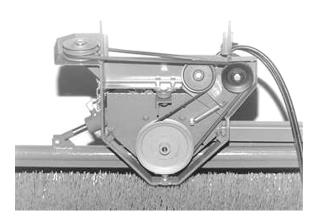



Photo 3

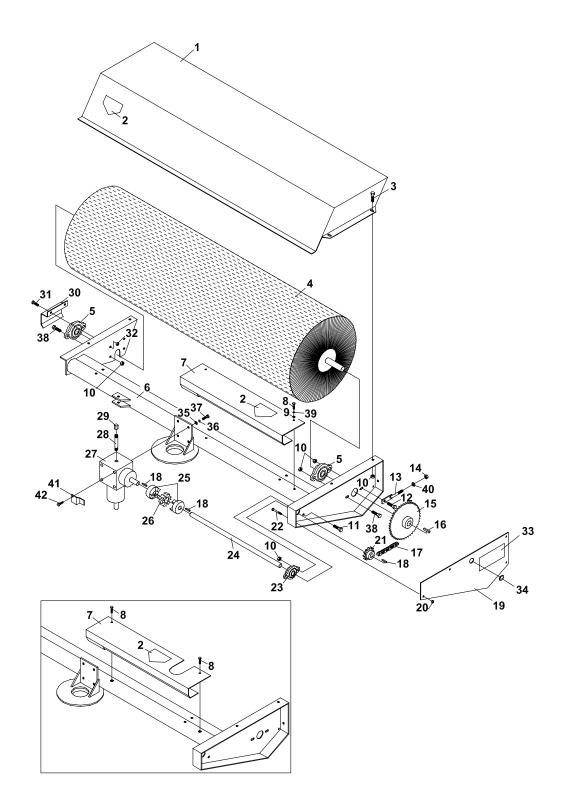

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	. DESCRIPTION	QTY
1-1 1-2 1-3	00-092 64139-21 (SN 1001 -		1 2 4	1-27	(SN 1001 - 87-160 (SN 1431 -	GEARBOX 1430) SUB 87-160 & 64-775 GEARBOX 1940) GEARBOX	1 1 1
1-4 1-5 1-6 1-7	(SN 2227 - 80-039 55-FB23016 62-097.7 60-041 (SN 1001 - 60-451 (SN 1073 - 60-612.7 (SN 2247 - 64197-002 (SN 1001 -	BROOM (15" X 54") 6 2-BOLT FLANGE BEARIN FRAME, ROTARY SWEEPI SHIELD-DRIVE SHAFT 1072) SHIELD-DRIVE SHAFT 2246) SHIELD-DRIVE SHAFT ) BLT-TDFM 1/4-20X3/4 2246) BOLT-WLF 1/4-20X3/4	1 G 2	1-28 1-29 1-30 1-31 1-32 1-33 1-34 1-35 1-36 1-37	24-031 60-464.7 (SN 1073 - 64139-08 (SN 1073 - 64141-6 00-093 06-010 64163-04	PIPE NIPPLE, 1/8 NPT X 2 PIPE CAP, 1/8 COVER, BEARING ) BOLT-5/16-18X3/4 WLF ) NUT, 5/16-18 DECAL-READ MANUAL PLUG 25/64X5/8X16GA WASHER LCKWSHR-HEL 5/16	1 1 1 2 2 1 1
1-9	`	FLATWASHER, 1/4	2		(SN 1001 - 64123-68 (SN 1431 -	1430) BOLT-HEX 5/16-18X1	4
1-10	(SN 1001 -	,	10	1-38 1-39		BLT-WLF 3/8-16 X 1 LOCKWASHER-1/4 HEL 2246)	3 2
1-11 1-12 1-13 1-14 1-15	64123-16 42-037	BOLT-HEX 3/8-16X1 BLT-HEX 3/8-16X1-1/4 CHAIN TIGHTENER LOCKNUT-NYLON 3/8-16 SPROCKET	2 1 1 1	1-40 1-41	64163-61 64-775 (SN 1431 -	WSHR .81X.406X16GA GEARBOX SHIELD BRKT )	1 1
1-16 1-17	64164-10	1/4X1/4X1-1/4 MACH KEY D #40 ROLLER CHAIN 40" CONNECTOR LINK, #40 #40 HALF LINK	1 1 1 1	1-42	64139-13	BLT-WLF 5/16-18X1/2	1
1-18 1-19 1-20 1-21 1-22 1-23 1-24 1-25 1-26	60-040.7 64141-2 83-H401012 64123-98	KEY-3/16X3/16X1-1/4 SQ SHIELD, CHAIN NUT-WLF 1/4-20 2 SPROCKET, H4010 X 3/4 BLT-HEX 1/4-20X2-1/2 2 FLANGE BEARING 2 BOL SHAFT, 3/4 X 24-3/4 COUPLER, CHJP4 X 3/4 INSERT, COUPLING	4				

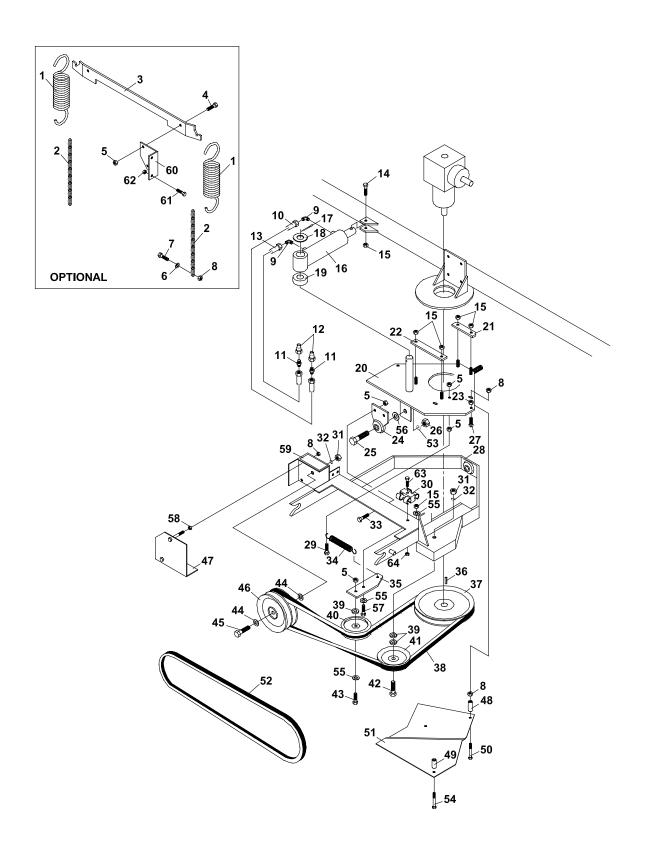


ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
2-1	41-012	SPRING	2	2-38	81-A088	BELT-A88	1
2-2	56-018-07	CHAIN-7 LINKS	2		(SN 1001 -	1072)	
2-3	64-585	FLOAT SPRING BRKT	1		81-A087	BELT-A87	1
2-4	64139-21	BLT-WLF 3/8-16X3/4	2		(SN 1073 - )	)	
2-5	64141-4	NUT-WLF 3/8-16	7	2-39	99-B12	SPACER	3
2-6	64163-02	WSR321/.328X.593/.608X1	1 2	2-40	83-013	IDLER, FLAT	1
2-7	99-K02	BOLT, FLANGE 5/16-18 X 1	2		(SN 1001 -	1072)	
2-8	64141-6	NUT, 5/16-18	10		83-029	IDLER	1
*	* 70-026	FLOAT SPRING KIT	1		(SN 1073 - )		
	`	S ITEMS 1-8 & 60 - 62)		2-41		PULLEY, IDLER	1
2-9		S FITTING-90 DEG.	2	2-42	90-0814	BOLT, 1/2 UNC x 1.3/4	1
2-10	20-218	HOSE, 1/4 X 48 100R1	1	2-43			1
2-11	25-0103-4-6		2	2-44			2
2-12	23-004	MALE QUICK COUPLER	2	2-45	64123-31		1
2-13	20-020	HOSE	1	2-46		PULLEY, 2GR IDLER	1
2-14	64123-67	BLT-HEX 3/8-16X2	1	2-47	60-452.7	SHIELD, DRIVE PULLEY	1
2-15	64229-03	LOCKNUT-NYLON 3/8-16	6		(SN 1073 - )		
2-16	23-005	CYLINDER	1	2-48	64-479	SPCR-PIVOT PLATE SHIELD	2
	* 21-13909X		1		(SN 1073 - )		
2-17		COTTER PIN, 3/16 X 1-1/2	1	2-49	64-480	SPCR-IDLER MNT SHIELD	1
2-18	64163-64	WSHR 1.015X1.500X14	1		(SN 1073 - )		
2-19	86-042	SET COLLAR	1	2-50	64123-64	BLT-HEX 5/16-18X2-1/4	2
2-20	62-096	PIVOT PLATE	1	0.54	(SN 1073 - )		
	(SN 1001 -		4	2-51		SHIELD-BOTTOM BELT	1
	62-620.7	PIVOT PLATE	1		(SN 1001 -		
0.04	(SN 1073 -		4			SHIELD-BELT	1
2-21	42-038.7	•	1	0.50	(SN 1073 - )	,	4
2-22	42-039.7	CLAMP, HOLD DOWN	1	2-52		DRIVE BELT-220	1
2-23	64141-4	NUT-WLF 3/8-16	2		,	TRIC CLUTCH)	4
2-24	62-622.7	REAR PIVOT	1 1		81-A040	DRIVE BELT-420, 220 RIC CLUTCH)	1
2-25 2-26	90-1018 64025-21	BOLT,5/8-11 X 2-1/4 NC NUT-HEX 5/8-11	1			DRIVE BELT-425	1
2-26 2-27	85-SS10	SET SCREW, 3/8-16 X 1-1/2			81-B041	DRIVE BELT-425	1
2-27 2-28	62-095	HITCH FRAME	1			RIC CLUTCH)	ı
2-20	(SN 1001 -		1	2-53	,	•	1
	62-621.7	HITCH FRAME	1	2-53	64123-56		1
	(SN 1073 -	=	'	2-54	(SN 1073 - )		'
2-29	64123-16	•	1	2-55		WSHR .81X.406X16GA	3
2-30	4134161	TUBE AND HOSE CLAMP	1	2-56		WASHER-41/64X1, 3/8X12	1
2-31	64025-09	HEX, NUT 1/2-13	2	2-57	64123-50		1
2-32	64006-05	LOCKWSHR-HELICAL 1/2	2	2-58		LOCKNUT-NYLON 5/16-18	2
2-33	64139-24	BLT-WLF 3/8-16 X 1	2	2 00	(SN 1193 - )		_
2-34	41-010	SPRING	1	2-59	00-025	DECAL	1
201	(SN 1001 -		•	2-60	64-685	GRILLE BRKT LFT	1
	41-020	SPRING	1	- 00		ECTRIC CLUTCH)	•
	(SN 1073 -		•			GRILLE BRKT RIGHT	1
2-35	40-029	, IDLER ARM	1			CTRIC CLUTCH)	
	(SN 1001 -		-	2-61	`	BOLT-5/16-18X3/4 WLF	6
	40-242.7	IDLER ARM	1			CTRIC CLUTCH ONLY)	
	(SN 1073 -			2-62	64141-6	NUT, 5/16-18	6
2-36	•	•	1			ECTRIC CLUTCH ONLY)	
2-37	83-BS8012		1	2-63	Ò1-014	SCREW-MACHINE	1
				2-64	64025-29	NUT	1
				l			

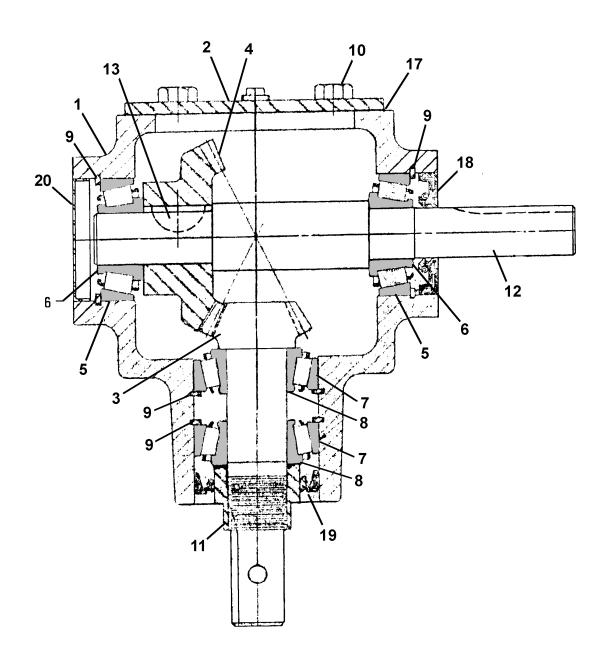




ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
3-1	87-A160-2	HOUSING	1				
3-2	87-A161	COVER	1				
3-3	87-B219	PINION SHAFT-14 TEETH	1				
3-4	87-B220	BEVEL GEAR-28 TEETH	1				
3-5	87-C143	BEARING CUP	2				
3-6	87-C144	BEARING CONE	2				
3-7	87-C171	BEARING CUP	2				
3-8	87-C172	BEARING CONE	2				
3-9	87-D259	SNAP RING	4				
3-10	87-D332	CAPSCREW-5/16 X 5/8	4				
3-11	87-D277	STAKE NUT	1				
3-12	87-E4210	SHAFT-OUTPUT	1				
3-13	87-J95	KEY-#9 WOODRUFF-HARD	1				
*	87-K38	PLUG-3/8 NPT	2				
3-17	87-K246	GASKET-COVER	1				
3-18	87-K247	SEAL	1				
3-19	87-K260	SEAL-INPUT	1				
3-20	87-K261	CAP	1				
	87-013	GEARBOX-COMPLETE	1				

<sup>\*</sup> NOT ILLUSTRATED

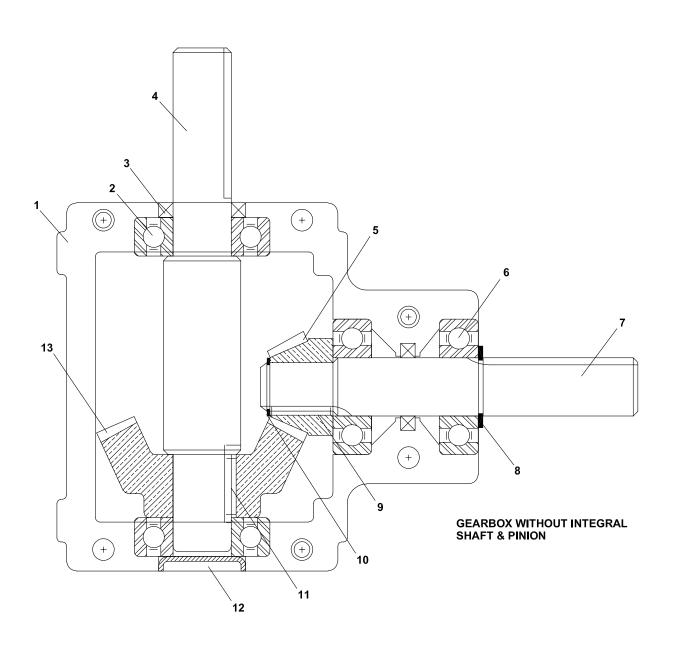

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
4-1	87-CM002824	HOUSING HALF	1				
	87-CM001453	HOUSING HALF	1				
4-2	87-CM153411	BALL BEARING	3				
4-3	87-CM301432	SEAL	2				
4-4	87-CM210484	SHAFT	1				
4-5	87-CM102111	GEAR	1				
4-6	87-CM151282	BALL BEARING	1				
4-7	87-CM210559	SHAFT	1				
4-8	87-CM620054	RETAINING RING	1				
4-9	87-CM600668	KEY	1				
4-10	87-CM620351	RETAINING RING	1				
4-11	87-CM600106	KEY	1				
4-12	87-CM640045	EXPANSION PLUG	1				
4-13	87-CM102129	GEAR	1				
*	87-CM411173	CAP SCREW-ALLEN HD	6				
*	87-CM410324	LOCKWASHER	6				
*	87-CM410001	PIPE PLUG	2				
*	29-076 PI	PE PLUG-1/4"	1				
*	87-160 GI	EARBOX	1				


<sup>\*</sup> NOT ILLUSTRATED

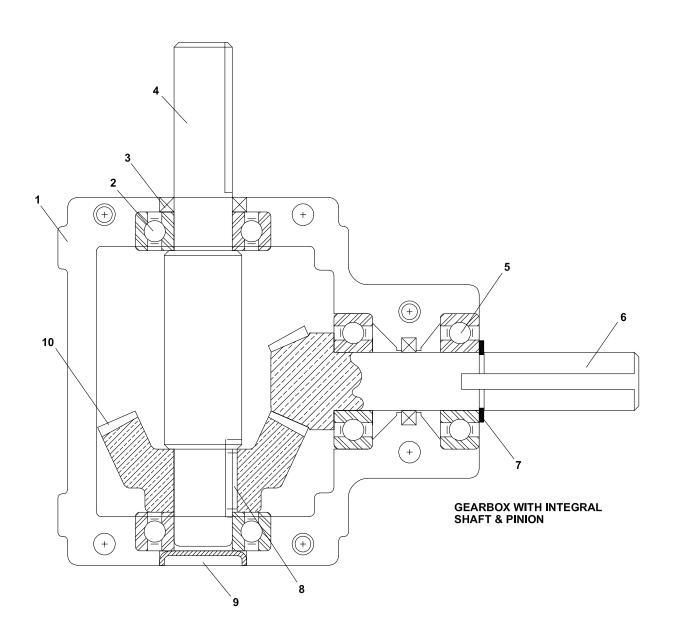



ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
5-1	87-CM002824	HOUSING HALF	1				
	87-CM001453	HOUSING HALF	1				
5-2	87-CM153411	BALL BEARING	3				
5-3	87-CM301432	2 SEAL	2				
5-4	87-CM210484	I SHAFT	1				
5-5	87-CM151282	BALL BEARING	1				
5-6	87-CM107201	INTEGRAL SHAFT & PIN	N 1				
5-7	87-CM620054	RETAINING RING	1				
5-8	87-CM600106	KEY	1				
5-9	87-CM640045	EXPANSION PLUG	1				
5-10	87-CM107169	GEAR	1				
*	87-CM411173	CAP SCREW-ALLEN HE	6				
*	87-CM410324	LOCKWASHER	6				
*	87-CM410001	PIPE PLUG	2				
*	29-076 P	IPE PLUG-1/4"	1				
*	87-160 G	EARBOX	1				


<sup>\*</sup> NOT ILLUSTRATED

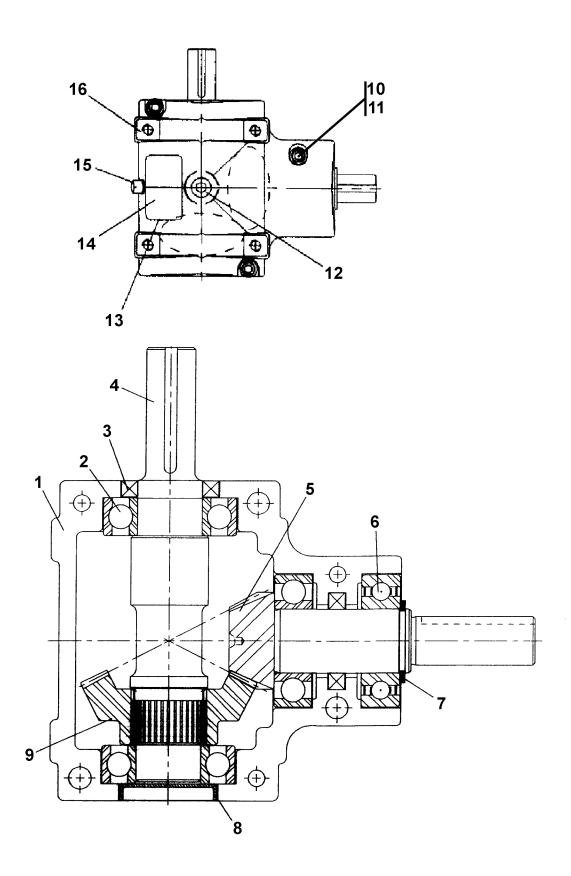



ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
6-1	87-CM003582	HOUSING HALF	1				
6-2	87-CM153437	BALL BEARING	3				
6-3	87-CM301374	SEAL	2				
6-4	87-CM226423	THRU SHAFT	1				
6-5	87-CM108068 (LEFT HAND)	INTEGRAL SHAFT & PIN	<b>l</b> 1				
6-6	87-CM153429	BALL BEARING	1				
6-7	87-CM620013	RETAINING RING	1				
6-8	87-CM640110	EXPANSION PLUG	1				
6-9	87-CM108514 (RIGHT HAND	<del>:</del>	1				
6-10	87-CM412320	ALLEN HD CAP SCREW	6				
6-11	87-CM410506	LOCKWASHER	6				
6-12	87-CM410001	PIPE PLUG-SOLID	2				
6-13	87-CM800573	I.D. TAG	1				
6-14	87-CM802876	I.D. TAG COVER	1				
6-15		PIPE PLUG-SOLID	1				
		HOUSING HALF	1				
6-17 *	87-CM800326	GEAR LUBE, IN OZ.	5				


\* NOT ILLUSTRATED

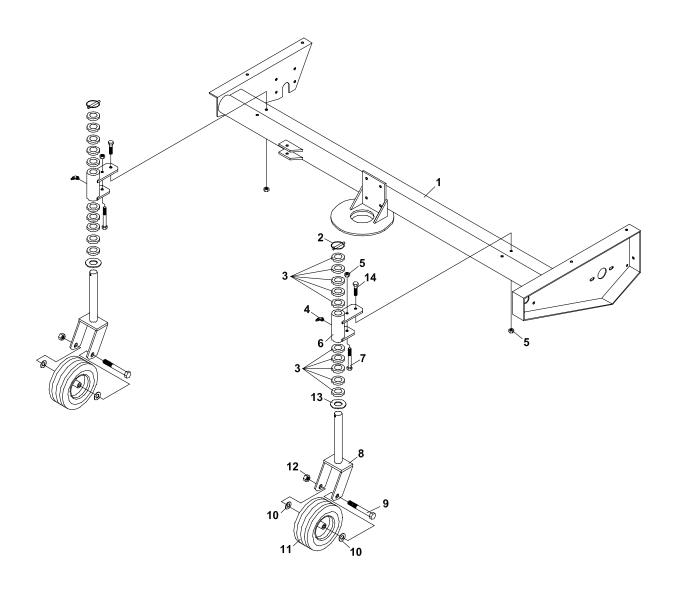

# FIGURE 7

ITEM	PART NO	. DESCRIPTION C	QΤΥ	ITEM	PART NO.	DESCRIPTION	QTY
7-1	62-097	FRAME, ROTARY SWEEPER	R 1				
7-2	03-017	CLIP, 5/16"	2				
7-3	64-804	SPACER, HEIGHT ADJ	20				
7-4	29-014	GREASE FITNG-1/4-28 90	2				
7-5	64141-4	NUT-WLF 3/8-16	4				
7-6	62-809	FRAME, CASTER SWIVEL	2				
7-7	64123-171	BOLT-HEX 3/8-16X3-1/2	2				
7-8	62-810	YOKE, RS350 CASTER WHL	_ 2				
7-9	90-0832	BOLT,1/2-13 X 4 NC	2				
7-10	64163-67	WASHER516X1X12GA	4				
7-11	53-111	WHEEL	2				
7-12	64229-05	LOCKNUT, 1/2-13	2				
7-13	64163-84	WSHR-1.015 X 1.75 X.125	2				
7-14	64139-24	BLT-WLF 3/8-16 X 1	2				

\* NOTE: CASTER WHEELS (OPTIONAL SN 1001 - 2246) (STANDARD SN 2247 - 2618)

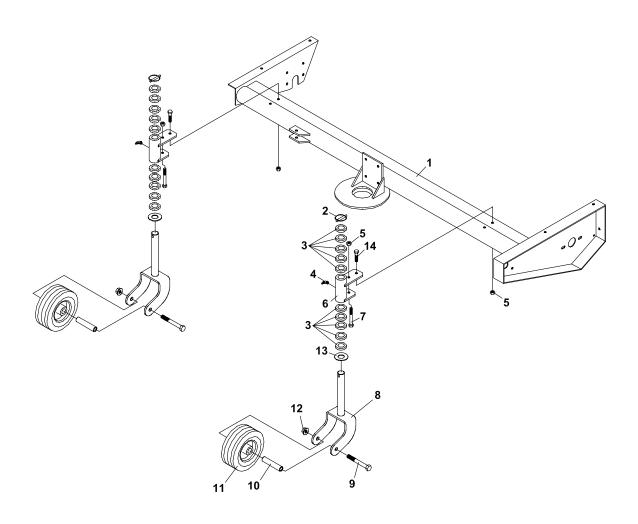



ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
7-1	62-097.7	FRAME, ROTARY SWEEPE	R 1				
7-2	03-017	CLIP, 5/16"	2				
7-3	6112057	SPACER ENGINE PULLEY	20				
7-4	29-014	GREASE FITNG-1/4-28 90	2				
7-5	64141-4	NUT-WLF 3/8-16	4				
7-6	62-809.7	FRAME, CASTER SWIVEL	2				
7-7	64123-171	BOLT-HEX 3/8-16X3-1/2	2				
7-8	62-882.7	YOKE, CASTER W/A	2				
7-9	90-0836	BOLT, 1/2 UNC x 4.1/2	2				
7-10	50-104	AXLE, CASTER WHEEL	2				
7-11	53-181	WHEEL, 6.25 X 3.00	2				
7-12	64141-13	NUT WLF 1/2-13	2				
7-13	64163-84	WSHR-1.015 X 1.75 X.125	2				
7-14	64139-24	BLT-WLF 3/8-16 X 1	2				

\* NOTE: CASTER WHEELS (SN 2619 - )

# **World Class Quality, Performance And Support**



Equipment from Jacobsen, a Textron company, is built to exacting standards ensured by ISO 9001 and ISO 14001 registration at all our manufacturing locations.

A worldwide dealer network and factory-trained technicians backed by Textron Parts Xpress provide reliable, high-quality product support.

